

EMERGENCY CHARGER



Mobiles phones have become essential in our everyday life. Deactivated mobile battery is something you do not want to happen, but it happens. Can happen at any time, resulting in no chance to communicate. This can be avoided with the emergency charger. You will be able to charge your mobile even in the most difficult conditions, without the need for power.

The operation of the device is very simple. This charger will really save you in moments of emergency and will never let you down.

Characteristics

- Charges your mobile phone, anywhere and anytime. Even when you talk.
- Very effective, charge only with a battery AA in 100-180 minutes.
- Modern design and portable.
- Very convenient after you can either charge with an AA alkaline battery or with Ni-Mh AA rechargeable battery.
- Safe to use. There is a special circuit protection to protect your mobile phone.
- Can be used by lots of mobile adapters with different cones for each mobile phone separately or in a set with 5 cones.

Technical characteristics

- Input Voltage: 1.2V-1.5V / Output Voltage: ~ 5.7V
- Charging Current : 400mAh
- Talk time:
- Charging time: about 1 - 3 hours
- Waiting time: 24 - 30 hours
- Dimensions: 1.8 x 7.1 cm
- Weight: 20 gr

Adaptors- cones for mobile phone:

- 1. FOR NOKIA** 3250, 5200, 5300 Xpress Music, 5500 Sport, 6070, 6080, 6101, 6103, 6111, 6125, 6131, 6151, 6233, 6270, 6280, 6300, 7360, 7370, 7373, 7390, 8800 Sirocco Edition, E50, E61, N70, N71, N73, N76, N80, N90, N91, N93, N93i, N95, 3110 classic, 5700 Xpress Music, 6085, 6290, E61i, E65, N91 8GB, N92, 5070, N70 Music Edition, N73, N80, 3109, 6110 Navigator, 2760, 6120, E90, 1200, 7500 Prism, 2630, 6555, 3500 classic, 6500 slide, N800 Internet Tablet, 6301, E51, N81, N81 8GB, N95 8GB, 1650, 6121, 5310 Xpress Music, N82, 5610 Xpress Music.
- 2. Nokia** 6500 classic, 7900 prism, 8600 Luna, 8800 Arte, 8800 Sapphire Arte.
- 3.FOR SONY ERICSSON** C702, C902, G700, G900, J100i, J110i, J120i, J220i, J230i, K200i, K220i, K320i, K510i, K530i, K550i, K550im, K610i, K610im, K750i, K770i, K800i, K810i, K850i, M600i, P1i, P990i, R300, R306, S500i, T250i, T303, T650i, V630i, V640i, W200i, W300i, W380i, W550i, W580i, W610i, W660i, W700i, W710i, W800i, W810i, W850i, W880i, W900i, W910i, W950i, W960i, W980i, Z250i, Z310i, Z320i, Z520i, Z530i, Z550i, Z610i, Z710i, Z770i.
- 4. FOR MOTOROLA** E680, E1070, RAZR V3, V3x, PEBL U6, SLVR L7, L6, L9, L2, A780, V360, E770, H700, KRZR, Z3, A1200E, U6, W510 κτλ.και HTC XDA,SPV TYNT II/P3452/ P3650 touch cruise και QTEC 8010, 8300,8310,S100,S110,S200, G100-XDA IQ, Cosmo, XDA 2,XDA 3, mini, neo, exec, mini s, Trion, Orbit, Terra, Argon - SPV C550,C600,C100,E600,E650,M500,M600, M5000,M3000,M650,M700
- 5. SAMSUNG** C170, D520, D800, D807, D820, D830, D840, D900, E200, E250, E500, E540, E550, E570, E590, E740, E780, E830, E840, E870, E900, E950, F200, F300, F500, i600, i620, J600, M300, P300, P310, T509, T809, U600, U700, V804, X820, X830, Z150, Z230, Z370, Z400, Z510, Z540, Z560, Z630, ZV40, ZV60 κ.α.

Extra cones are available for the following models:

- 1100, 1110i, 1112, 1600, 2300, 2310, 2600, 2610, 2626, 3230, 3310, 3330, 3410, 3510, 3650, 5100, 5140, 5140i, 5210, 6020, 6021, 6030, 6060, 6100, 6220, 6230, 6230i, 6510, 6600, 6610, 6610i, 6630, 6680, 6681, 7210, 7250, 7250i, 7260, 7280, 7380, 7610, 8800, 9300, 9300i, 9500, E60, E70
- 2.
- LG A7150, B2000, B2100, B2050, C1100, C1150, C1200, C1300, C2200, C2200, C3300, C3310, C3320, C3400, F2100, F2300, F2400, G5500, G7000, G7050, G7200, KG225, L1100, L3100, L341i, L342i, L1100, L1200, L3100, L5100, P7200, S5200, T5100, U8138, U8150, U8170, U8180, U8290, U8290, U8550 ,U8 κ.α.
- LG 510, 512, G5200, G5300, G5400, G5410, G7000, G7020, G7070, G7100, G7120
- LG KE800 Chocolate, KE820, KE850 Prada, KE970 Shine, KG320, KG800 Chocolate, KG810, KG920 κ.α.
- MOTOROLA C250, C300, C330, C350, C450, C550, C650, V220, V180, V220, W220, W375, T2288, V2288 κ.α.
- MOTOROLA A1000, A830, A835, A920, A925, E398, E550, MPx220, ROKR E1, T720 Timeport 280, V1050, V300, V525, V535, V550, V60, V60i, V600, V620, V635, V66, V66i, V70, V80, V980, V975, C390, C975, C980, E790, V500, V545, V547, V400, T280, T280i κ.α.
- SONY ERICSSON T20, T28, T29, T65, T68, T230, T230i, T300, T600, T610, T630, K500, F500i, K700i, Z200, Z600 κ.α.
- SAGEM MYX-6, 3000, 900, MyS-7, V-55, V-56, V-65, V-75, V-76,V-85, X-1, X-2, X-3, X-4, X-5, X-6, X-7, X-8, X1-2, X2-2, X3-2, X5-2, X6-2, Z-3, SG-321i, SG-341i, VS1, VS2 κ.α.
- SAMSUNG A300, SGH-A800, SGH-C100, C130, SGH-C200N, SGH-C210N, C300, SGH-D410, SGH-D500, D520, SGH-D600, SGH-E100, SGH-E300, SGH-E310, SGH-E330, SGH-E330N, SGH-E340, SGH-E350, E370, E380, SGH-E600, SGH-E610, SGH-E700, SGH-E710, SGH-E730, SGH-760, SGH-E770, SGH-E800, SGH-E820, SGH-E850, SGH-E860V, SGH-N400, SGH-N500, SGH-N620, SGH-P400, SGH-P510, P900, SGH-

- Q200, SGH-S300, SGH-S300M, S400i, SGH-S500, SGH-T100, T150, SGH-T400, SGH-V200, SGH-X100, X150, X160, X200, X210, X300, SGH-X450, SGH-X460, SGH-X480, X490, X500, X510, X520, X530, SGH-X600, X630, SGH-X640, SGH-X660, X670, SGH-X700, SGH-X800.
11. E620, E720, E810, i300, P730, S341i, S342i, Z110, Z130, Z140, Z300, Z500, ZM60, ZV10, ZV30 κ.α.
 12. SHARP GX10, GX20
 13. SHARP GX25, GX30, GX29, GX17
 14. SIEMENS CF110, A52, A55, A57, A60, A62, A65, A70, A75, AL21, AX72, AX75, C55, C60, C62, C65, C70, C72, C75, CC75, CF62, CF72, CF75, CFX65, CL75, CT65, CV65, CX65, CX70, CX70 Emoty, CX75, M55, M65, M75, MC60, ME75, S55, S65, S75, SF65, SK65, SL55, SL65, SL75, SP65, SX1, SXG75, Xelibri
 15. ΚΟΝΕΚΤΟΡΑΣ 17 ΣΕ 1 .Όλοι οι παραπάνω κονέκτορες σε 1 συσκευασία .

Available colors: black, silver, light blue, red.

Available packages containing: a) an emergency charger, an adapter and a cone depending on your mobile model or b) an emergency charger, an adapter and 5 cones consisting of the models: 1) Nokia 6101, 2) Nokia 8600, 3) S.Er. K750, 4) Motorola V3, 5) Samsung D820